


Notes:

1. Variables: D = Depth of Pavement
2. Removal and replacement also applies to full depth repairs at cracks.
3. Place dowel bars in new joint with the greatest distance to the next transverse joint or working random crack. Place dowels on approach side of repair when distance to next transverse joint or working random crack is equal for both new joints.

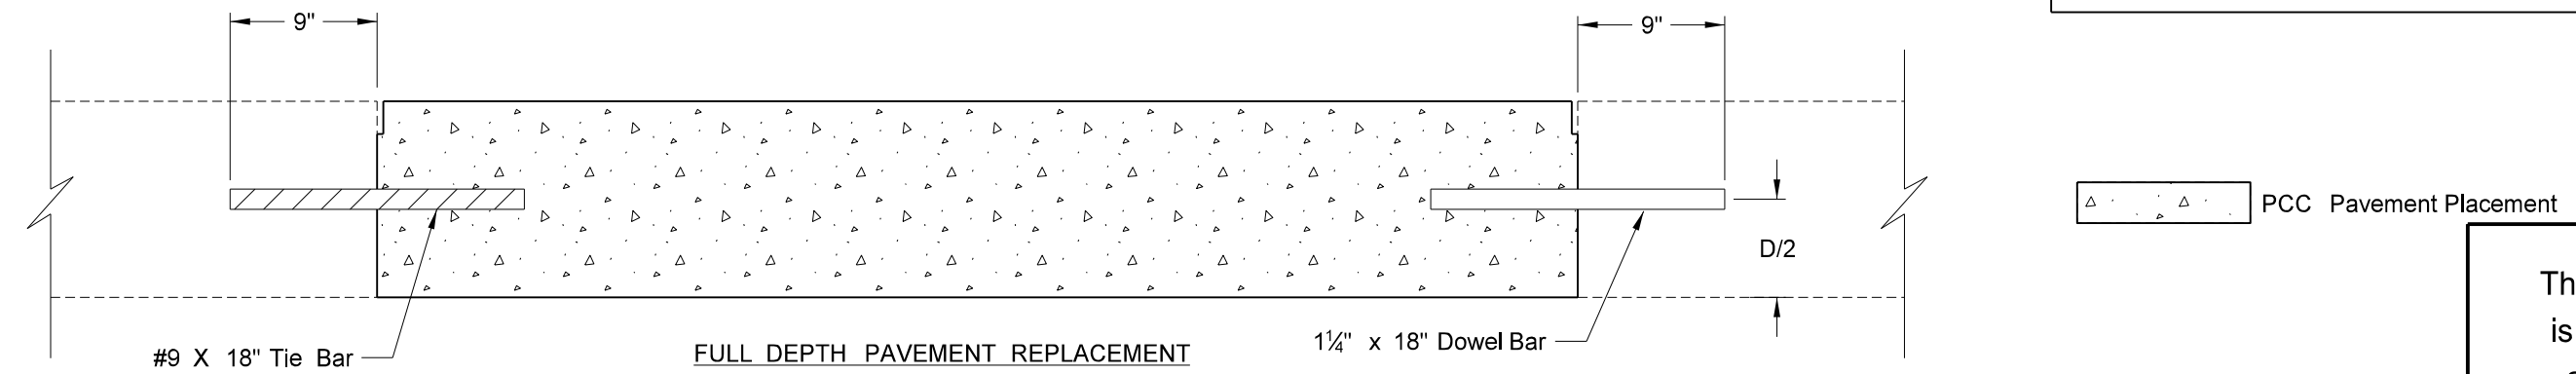

This document
is preliminary
and not for
construction or
implementation
purposes.

Jointed Concrete Pavement Repair
Full-Depth, Non-Reinforced PCC Pavement
(Longitudinal Length Less than One Panel)

Project Description

Project Location